



FITTING INSTRUCTIONS

Alternator

All Alternators

Alternator removal and installation



Step 1

1. Disconnect the negative battery cable.



Step 2

2. Disassemble the alternator belt the disconnect the alternator connector.



Step 3

3. Pull out the old alternator from the vehicle.





Step 4

4. Prepare the new Valeo alternator.



Step 5

5. Install the alternator.



Step 6

6. Install the alternator belt then fasten the belt tensioner based on manufacture torque recommendation then connect alternator connector.



Step 7

7. Connect the negative battery cable.

