



FITTING INSTRUCTIONS

Injector

All petrol engines

Injector removal process



Step 1

1. Remove the injectors' relay.

“refer to the vehicle manufacturer service manual for the location.”



Step 2

2. Start the engine to make sure there is no fuel inside the fuel rail.


- Wait until the engine stop running.
- Start the engine again to make sure it will not be run.



Step 3

3. Remove the injectors' connector.



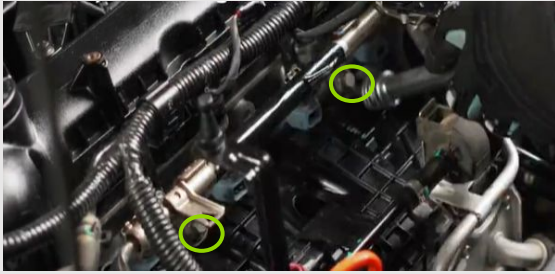

Step 4

4. Remove the fuel rail bolts.



Step 5

5. Pull out the fuel rail gently from the engine.



Step 6

6. Remove the Injector clip by using straight Retaining Plier.



Step 7

7. Pull out the injector from the rail gently.



Step 8

8. Remove the injector O-ring.

