



FITTING INSTRUCTIONS

Electric Thermostat

Applications

All models with electric thermostat

REMOVAL STEPS



Step 1

Remove the radiator cap



Step 2

Drain the coolant



Step 3

Disconnect the negative battery cable



Step 4


Pull out the coolant hose from the thermostat body






Step 5

Disconnect the electric thermostat connector

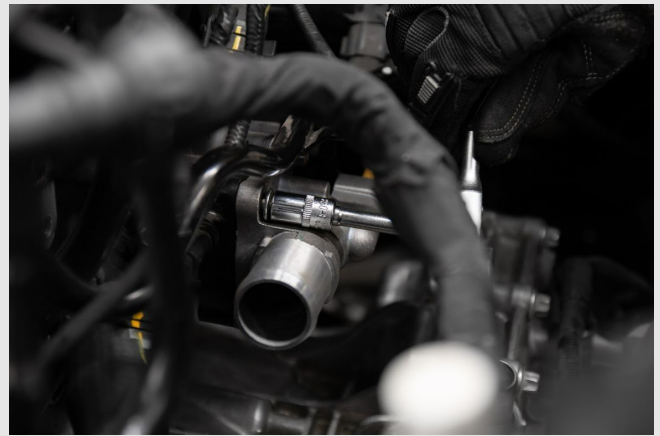

Step 6

Unscrew the thermostat bolts

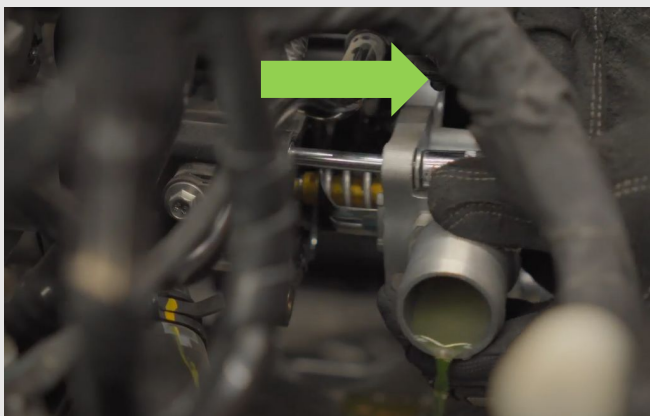

Step 7

Remove carefully the thermostat assembly from the engine.

Note: All the disassemble operation must done while the engine is cold.




INSTALLATION STEPS




Step 8

Clean and remove coolant contamination on the cylinder head

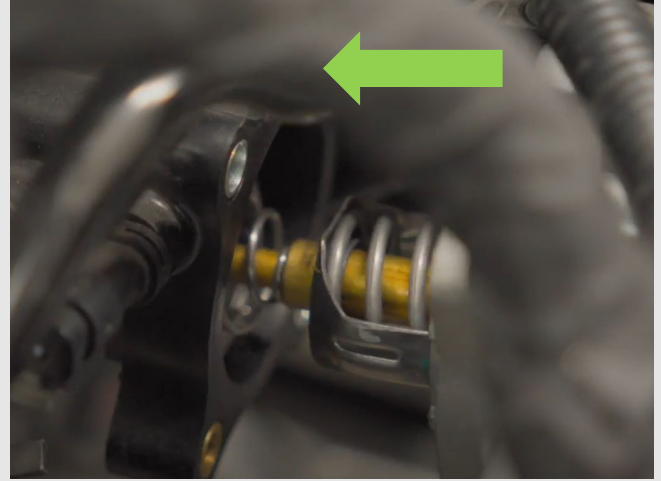

Step 9

Install the new thermostat assembly

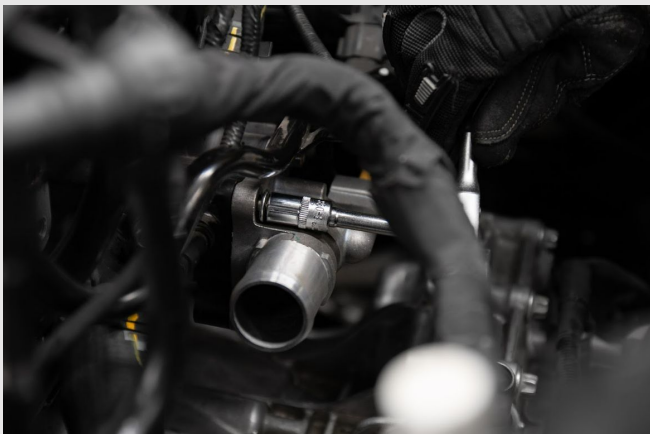

Step 10

Tighten the thermostat bolts with cylinder head with no more than 10 NM



Step 11

Connect the coolant hoses to thermostat





Step 12

Connect the electric thermostat connector



Step 13

Connect the battery negative cable.



Step 14

Fill the cooling system with new coolant and follow the procedure for refill coolant by the manufacturer.

