



FITTING INSTRUCTIONS

Accumulator replacement


Application for
Models equipped
with iStARS

ACCUMULATOR REMOVAL PROCEDURES



Step 1

1. Disconnect the negative battery cable.

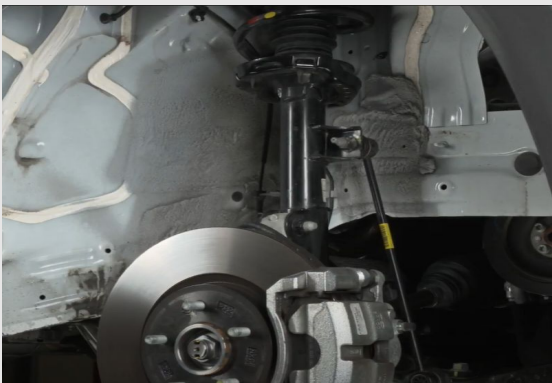


Step 2

2. Raise the vehicle
A. Remove the FL wheel
B. Remove the archer liner




HOW TO DISCHARGE THE ACCUMULATOR

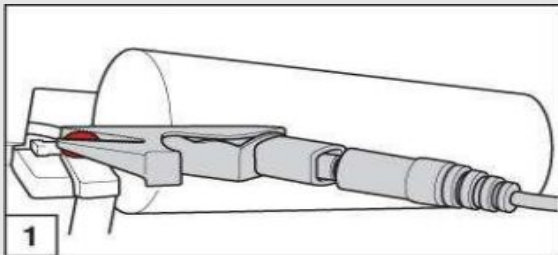


Step 1

1. Connect stop-start system capacitor discharging tool to capacitor negative terminal (1)

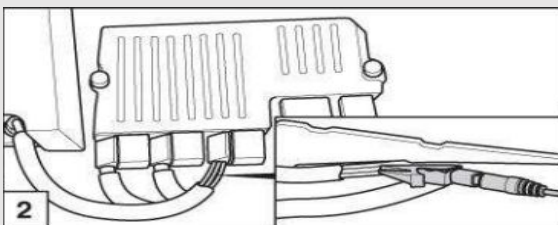

Step 2

2. Connect stop-start system capacitor discharging tool to stop-start system control module positive terminal (2)

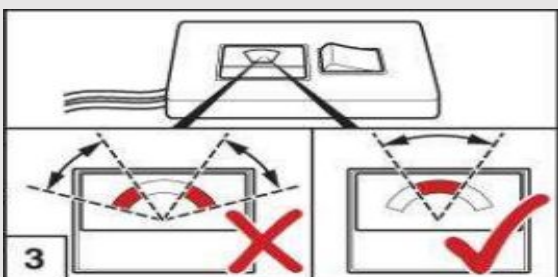

Step 3

3. Operate stop-start system capacitor discharging tool until the capacitor is fully discharged (3)

