



## FITTING INSTRUCTIONS

### ReStart

### Applications

All models with ReStart system



## REMOVAL STEPS



Step 1

1. Remove the negative battery cable and the battery sensor connector.



Step 2

2. Disassemble the power terminal nut.





Step 3

3. Pull out the power cable from the ReStart.



Step 4

4. Disassemble the ReStart bolts.



Step 5

5. Pull out the ReStart out of the engine.

6. the installation process is versus the removal steps.

