



FITTING INSTRUCTIONS

Brakes


All models

Front brake pad replacement



Step 1

1. Remove the front tire then release the brake hose bracket from the strut.

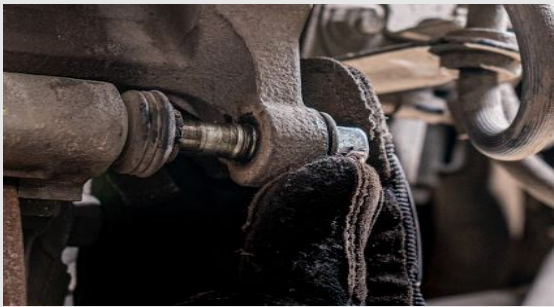

Step 2

2. Loosen the caliper bolt then pull down the caliper body.



Step 3

3. Remove the brake pads and the upper and lower return springs






Step 4

4. Return the caliper piston by using the required SST, after that install the brake hose.



Step 5

5. Install the springs and the brake pads.

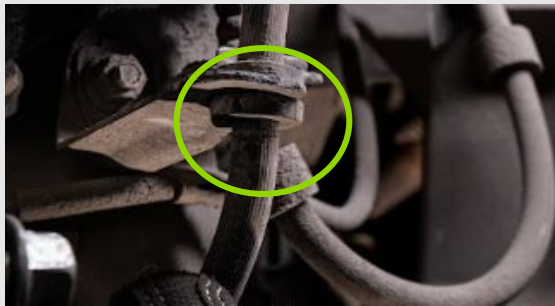

Step 6

6. Install the brake hose.



Step 7

7. Assemble the caliper and fasten the bolt.

